



Original	Sustituto
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause/[≡]	Pause / Step / Freeze
Stop/[≡+]	Stop / Hold
Rec/[≡◆]	Rec / Rec Mode
<</[≡o]	<< / Tune-
<</[≡i]	<< / Preset-
>> /[≡?]	>> / Preset+
>>/[≡x]	>> / Tune+
Info	Info / Angle
OI/II/Audio	Audio / Lang I/II
[≡]	Text / Goto
←/<x]	Fav / Marker / PC
1	1
2	2
3	3

Original	Sustituto
4	4
5	5
6	6
7	7
8	8
9	9
*	Setup / OPT /
0	0
Up	Up
[→]	AV / Input / RDS
Left	Left
OK	OK
Right	Right
Down	Down
Netflix	Shift + Red / Netflix /
You Tube	Shift + Yellow / YouTube /
Vol+	Vol+





Original	Sustituto	Original	Sustituto
Home / Source	Menu / Home		
P+	CH+ / Page+		
Vol-	Vol-		
P-	CH- / Page-		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
EPG	Guide / EPG / -/--		
List	Smart / List		
Q.Menu	D.Menu / Top		

Original	Sustituto








 

 

 

 




Original	Sustituto
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause [/≡]	Pause / Step / Freeze
Stop/[≡+]	Stop / Hold
Rec/[≡◆]	Rec / Rec Mode
<</[≡o]	<< / Tune-
<</[≡i]	<< / Preset-
>> /[≡?]	>> / Preset+
>>/[≡x]	>> / Tune+
Info	Info / Angle
O) /II/Audio	Audio / Lang I/II
[≡]	Text / Goto
←/<x]	Fav / Marker / PC
1	1
2	2
3	3

Original	Sustituto
4	4
5	5
6	6
7	7
8	8
9	9
*	Setup / OPT /
0	0
[→]	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Netflix	Shift + Red / Netflix /
YouTube	Shift + Yellow / YouTube /
Vol+	Vol+





Original	Sustituto
 Home/Source	 Menu / Home
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/--
 List	 Smart / List
 Q.Menu	 D.Menu / Top

Original	Sustituto

