


 

 



 






























 


 









 

 






 



 

 




Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute
	--		Guide
	P<P		Pre Ch
	I-II		Dual
	1		1
	PP		Eject
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol-		Vol -
	Vol+		Vol +
	Up		Up
	PR+		Ch +
	PR-		Ch -
	Down		Down
	Right		Right
	Left		Left
	M		Ok
	M		Menu
	[i]/Info		Info
	Red/Sound		Red
	Green/Picture		Green
	Yellow/Feature		Yellow
	Blue/Install		Blue
	TV		TV/R
	AV		AV
	[≡]/Text		Text





Original	Sustituto
 [≡o]	 SETTINGS OPT Options
 [≡+]	 AD SUBT Subt
 [≡x]	 PICTURE FORMAT Format
 [.=]	 ECO 3D 3D
 [≡?]	 CLEAR EXIT Exit
 [≡i]	 HOME SMART Smart
 [≡♦]	 APP MEDIA Media

Original	Sustituto

