






















Original	Sustituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 100	 Guide / EPG / -/-
 Recall	 Back / Return
 TV	 TV/Radio /
 Autoscan	 Smart / List
 Sleep	 Sleep / Timer

Original	Sustituto
 Disp	 Display / Media
 Exit	 Exit / Cancel / Clear
 MTS	 OK
 Mute	 Mute / Dimmer
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 Menu	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original		Sustituto	
	Teletext		Text / Goto
	Reveal		Info / Angle
	Page-		Shift + CH- /
	Page-		I<< / Preset-
	Page+		Shift + CH+ /
	Page+		>>I / Preset+

Original		Sustituto	

