



Original	Sustituto	Original	Sustituto
	Power		Power
	Goto		Smart
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Zoom+		Ch +
	Zoom-		Ch -
	Vol+		Vol +

Original	Sustituto	Original	Sustituto
	Vol-		Vol -
	Mute		Mute
	<</REV		<<
	>>/FWD		>>
	<</Prev		<<
	>> /Next		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Step		Pre Ch
	Menu		Menu
	Title		Info
	Setup		Options
	PBC		Yellow
	Up		Up
	Down		Down
	Right		Right





Original		Sustituto		Original		Sustituto	
	Left		Left				
	OK		Ok				
	OSD		List				
	Angle		AV				
	Subtitle		Subt				
	Video		TV/R				
	A-B		Media				
	Prog		Sleep				
	Return		Back				
	Repeat		Text				
	Slow		Format				
	Audio		Dual				
	N/P		3D				
	Clear		Exit				

