 

 

 

 




 






 

 

 

 

 

 



 

 

 
 

 





Original	Sustituto
	 Power
	 Mute / Dimmer
	 Info / Angle
	 Sleep / Timer
	 Display / Media
	 Smart / List
	 Shift + 3
	 7
	 1
	 2
	 >> / Tune+
	 3
	 4
	 Vol+
	 << / Tune-
	 5
	 6

Original	Sustituto
	 Vol-
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Left
	 Right

