 



 

 
 
 
 
 
 
 

 

 

 

 

 
 
 
 



 








Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right

Original	Sustituto
 Left	 Left
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Red	 Red
 Yellow	 Yellow
 Blue	 Blue
 Green	 Green
 EPG	 Guide
 Subtitle	 Subt
 TTX	 Text
 Audio	 Dual
 i	 Info
 FAV	 Pre Ch
 Tv/Radio	 TV/R





Original		Sustituto		Original		Sustituto	
VIDEO	Video	HOME SMART	Smart				
SCAN	Scan	APP MEDIA	Media				
DEVICE	Device	SETTINGS OPT	Options				
FILE	File	DISC NAV LIST	List				
ZOOM	Zoom	ZOOM	Eject				
ROLL	Roll	TIMER AV	AV				
RECORD	Record	REC MODE	Rec				
PREV	Prev.	⏪	I<<				
NEXT	Next	⏩	>>I				
▶/	Play	▶	Play				
▶/	Pause		Pause				
⏪	<<	⏪	<<				
⏩	>>	⏩	>>				

