


 
 
 
 
 

 
 
 


 
Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Audio/Audio/Lang/MTS		Audio / Lang / I/I
	Exit/Exit		Exit / Cancel / Clear

Original	Sustituto	Original	Sustituto
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	LCD Menu		Shift + D.Menu / Top Menu
	Down		Down
	DVB Menu		D.Menu / Top
	Input		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Info/Display		Info / Angle
	Zoom/P.Ratio		Zoom / Size
	Tv/Radio		TV/Radio /





Original	Sustituto
	FAV Fav / Marker / PC
	TTX Text / Goto
	Pause / Step / Freeze
	Shift + Exit / Cancel / Clear
	Shift + Guide / EPG / -/-
	Stop / Hold
	Shift + Zoom /
	Play / Slow
	Setup / OPT /
	Subtitle / EQ
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	>>I / Preset+

Original	Sustituto
	Blue / Prime Video / Random

