



 


 

 

 









 

 




Original	Sustituto
	 Power
	 Mute
	 Format
	 Dual
	 3D
	 Smart
	 Play
	 Pause
	 Stop
	 AV
	 Media
	 TV/R
	 1
	 2
	 3
	 4
	 5

Original	Sustituto
	 6
	 7
	 8
	 9
	 0
	 Eject
	 Pre Ch
	 Back
	 Ch -
	 Ch +
	 Vol -
	 Vol +
	 Up
	 Right
	 Down
	 Left
	 Ok





Original	Sustituto	Original	Sustituto
	 Info		
	 Menu		
	 Options		
	 D. Menu		
	 Subt		
	 Red		
	 Green		
	 Yellow		
	 Blue		
	 Text		
	 Exit		
	 Guide		

