

 






 

 







 

 










| Original   | Sustituto   |
|--|---|
|  SOURCE   |  RDS AV INPUT AV / Input / RDS         |
|  Power    |  Power                                 |
|  1        |  TV 1 1                                |
|  2        |  DVD 2 2                               |
|  3        |  CD - STB 3 3                          |
|  4        |  VIDEO 4 4                             |
|  5        |  TAPE 5 5                              |
|  6        |  TUNER 6 6                             |
|  7        |  AUX - HDD 7 7                         |
|  8       |  USB 8 8                              |
|  9      |  BLUETOOTH 9 9                       |
|  EPG    |  --/-- GUIDE EPG Guide / EPG / --/-- |
|  0      |  HDMI - SAT 0 0                      |
|  PRE-CH |  RETURN BACK Back / Return           |
|  HDMI   |  SHIFT + HDMI - SAT 0 Shift + 0      |
|  YPbPr  |  OPT-TOOLS SETUP Setup / OPT /       |
|  VIDEO  |  SHIFT + VIDEO 4 Shift + 4           |

| Original  | Sustituto   |
|---|---|
|  PC          |  SHIFT + PC FAV MARKER Shift + Fav / Marker / PC |
|  Vol CH+     |  CH PAGE CH+ / Page+                             |
|  Mute        |  DIMMER MUTE Mute / Dimmer                       |
|  Vol+ CH     |  VOL+ Vol+                                       |
|  Vol- CH     |  VOL- Vol-                                       |
|  ZOOM        |  SIZE ZOOM Zoom / Size                           |
|  CH-         |  CH PAGE CH- / Page-                             |
|  DUAL        |  LANG I/II AUDIO Audio / Lang I/II               |
|  ADJ AUDIO   |  TITLE SOUND Sound / Title                       |
|  ADJ VIDEO  |  FORMAT PICTURE Picture / Format                |
|  SLEEP     |  TIMER SLEEP Sleep / Timer                     |
|  Up        |  Up  |
|  Left      |  Left  |
|  OK        |  OK  |
|  Right     |  Right   |
|  MENU/EXIT |  HOME MENU Menu / Home                         |
|  MENU/EXIT |  CLEAR EXIT CANCEL Exit / Cancel / Clear       |



