 



 

 

 

 







 



 

 

 

 



 



 







 





 



 

 

 

 

 

 
 






Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Fav / Marker / PC
 Info	 Info / Angle
 Menu	 Menu / Home
 Back	 Back / Return
 EPG	 Guide / EPG / -/--

Original	Sustituto
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Vol+	 Vol+
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Tv/Rad	 TV/Radio /
 Page Up	 CH+ / Page+
 Page Down	 CH- / Page-
 HDMI/RES	 Shift + 0
 HDMI/RES	 AV / Input / RDS
 Ratio	 Picture / Format
 Red	 Red / Netflix / Search
 SOS	 D.Menu / Top
 SUB	 Subtitle / EQ





Original	Sustituto	Original	Sustituto
LANG Green	Green / APP / Repeat		
LANG Lang.	Audio / Lang I/II		
Yellow	Yellow / YouTube / Repeat		
TXT Blue	Blue / Prime Video / Random		
TXT TXT	Text / Goto		
Timer	Sleep / Timer		
Media	Display / Media		
Rec	Rec / Rec Mode		
USB/List	Smart / List		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		
>>	>> / Tune+		
<<	<< / Tune-		
>>	>> / Preset+		
<<	<< / Preset-		
Nothing	Setup / OPT /		

