


 

 

 

 














 
 

 

















 



 
 


 


 
 
 



 
 
 
 
 
 
 

 



Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +

Original	Sustituto
 CH-	 Ch -
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Source	 AV
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 List/Rec	 List
 USB/Media	 Media
 SOS/Help	 Options
 EPG/Guide	 Guide
 I-I/Goto	 Smart
 Rec	 Rec





Original	Sustituto	Original	Sustituto
	Stop		√
	Play		TV/R
	Pause		Back
	I<<		
	<<		
	>>		
	>>I		
	Red/Timer		
	Green		
	Yellow		
	Blue		
	4:3/16:9		
	Subt.		
	Lang		
	Sleep		
	Zoom		
	Text		
			Play
			Pause
			I<<
			<<
			>>
			>>I
			Red
			Green
			Yellow
			Blue
			Format
			Subt
			Dual
			Sleep
			Eject
			Text

