

 

 

 

 
 
 

 

 
 
 






 
 

 

 
 
 
 






 


 



Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Freeze	 Shift + Pause
 Sleep	 Sleep
 TV / RA	 TV/R
 Menu	 Menu
 Exit	 Exit
 Up	 Up

Original	Sustituto
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 FAV	 Pre Ch
 Back	 Back
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 EPG	 Guide
 PANEL	 Smart
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 i	 Info





Original	Sustituto	Original	Sustituto
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Media		Media
	TXT		Text
	OPT		Options

