














 












 

 



 


 


















Original	Sustituto	Original	Sustituto
 Power	 Power	 Vol-	 Vol-
 Mute	 Mute / Dimmer	 Input	 AV / Input / RDS
 1	 1	 PR-	 CH- / Page-
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 Enter	 OK
 5	 5	 Right	 Right
 6	 6	 Menu	 Menu / Home
 7	 7	 Down	 Down
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Favourite	 Fav / Marker / PC
 Sleep	 Sleep / Timer	 FAV-	 Shift + CH- /
 0	 0	 FAV+	 Shift + CH+ /
 Recall	 Back / Return	 Info	 Info / Angle
 Vol+	 Vol+	 P-Mode	 Picture / Format
 I/II	 Audio / Lang I/II	 S-Mode	 Sound / Title
 PR+	 CH+ / Page+	 ARC	 Display / Media






































	Original	Sustituto	
	EPG	Guide / EPG / -/--	
	Text	Text / Goto	
	Mix	+ Shift + Text /	
	Size	Zoom / Size	
	Reveal	D.Menu / Top	
	Hold	Stop / Hold	
	Index	Smart / List	
	S.Page	Eject / Surround	
	S.TITL	Subtitle / EQ	
	Red	Red / Netflix / Search	
	Green	Green / APP / Repeat	
	Yellow	Yellow / YouTube / Repeat	
	Blue	Blue / Prime Video / Random	

Original	Sustituto






















Original	Sustituto
Update	 Shift + D.Menu / Top Menu
Aft/Caf	 Shift + AV / Input / RDS
Reveal	 Setup / OPT /
Off/Tim	 Eject / Surround
Game Coo	 Smart / List
2.Fav P/C 2.	 Fav / Marker / PC
Chan.Down	 CH- / Page-
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9
Guide -/-- 1.	 Guide / EPG / -/--

Original	Sustituto
0/10	 0
Menu audio	 Audio / Lang I/II
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat
Yellow	 Yellow / YouTube / Repeat
Blue	 Blue / Prime Video / Random
Color+ P.Std	 Picture / Format
Color- S.Std	 Sound / Title
Audio+	 Shift + Vol+
Tune-	 << / Tune-
Tune+	 >> / Tune+
Menu	 Menu / Home
Mute	 Mute / Dimmer
Info	 Info / Angle
Subt.List	 Subtitle / EQ
Txt Stop	 Stop / Hold
Sleep Timer	 Sleep / Timer





Original	Sustituto	Original	Sustituto
Return TV	 TV/Radio /		
Menu video	 D.Menu / Top		
Text	 Text / Goto		
Txt Expand	 Zoom / Size		
TV/AV	 AV / Input / RDS		
On/Off	 Power		
Menu Up	 Up		
Display	 Display / Media		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		

