

























 



 



 
 






 

 





 
 


Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 EPG	 Guide / EPG / -/--
 Settings	 Setup / OPT /
 Up	 Up
 Input	 AV / Input / RDS

Original	Sustituto
 Left	 Left
 OK	 OK
 Right	 Right
 List	 Smart / List
 Down	 Down
 Back	 Back / Return
 NETFLIX	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Google Play	 Shift + Green / APP /
 Vol+	 Vol+
 Google Assistant	 Display / Media
 P+	 CH+ / Page+
 Vol-	 Vol-
 Home	 Menu / Home
 P-	 CH- / Page-
 Text	 Text / Goto





Original	Sustituto
 USB	 +  Shift + 8
 I/II	 Audio / Lang I/II
 Subt	 Subtitle / EQ
 Play / Text Mix	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop / Text Hold	 Stop / Hold
 Text Size	 Zoom / Size
 << / Text	 << / Tune-
 I<< / Text Index	 I<< / Preset-
 >>I / Text Reveal	 >>I / Preset+
 >> / Text Cancel	 >> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Sustituto

