



 

 



 















 


 








 







 

 

 

 









 



 





Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	Hold		Stop / Hold
	♪		Sound / Title
	Sub		Subtitle / EQ
	16:9		Picture / Format
	TV/TX		TV/Radio /
	Double		D.Menu / Top
	[]		Setup / OPT /
	Mix		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Swap		Back / Return
	Vol+		Vol+
	PP		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0





	Original	Sustituto	
	Violet	Fav / Marker / PC	
	Red	Red / Netflix / Search	
	Green	Green / APP / Repeat	
	Yellow/Timer	Yellow / YouTube / Repeat	
	Blue	Blue / Prime Video / Random	
	Update	Shift + OK	
	Reveal	Shift + Back / Return	
	P100	Shift + 0	

Original	Sustituto

