





























 







































| Original | Sustituto |
|---|---|
|  Power |  Power |
|  <</Size |  << / Tune- |
|  Play |  Play / Slow |
|  Pause/Timeshift |  Pause / Step / Freeze |
|  >>/Subpage |  >> / Tune+ |
|  Source |  AV / Input / RDS |
|  I<< |  I<< / Preset- |
|  Stop |  Stop / Hold |
|  >>I/Index |  >>I / Preset+ |
|  Menu |  Menu / Home |
|  Mouse |  Back / Return |
|  Smart TV |  Smart / List |
|  Exit |  Exit / Cancel / Clear |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |

| Original | Sustituto |
|--|---|
|  Vol+ |  Vol+ |
|  Down |  Down |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Mute |  Mute / Dimmer |
|  Audio |  Audio / Lang I/II |
|  CH- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Display |  Display / Media |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Text |  Text / Goto |
|  7 |  7 |
|  8 |  8 |





| Original | Sustituto |
|----------|---|
| 9 | 9 |
| HOLD | SHIFT + HOLD Shift + Stop / |
| REC | REC MODE Rec / Rec Mode |
| 0 | HDMI - BAT 0 |
| ↶ | PC FAV MARKER Fav / Marker / PC |
| SUBTITLE | EQ SUBTITLE Subtitle / EQ |
| [Red] | NETFLIX SEARCH Red / Netflix / Search |
| [Green] | APP REPEAT Green / APP / Repeat |
| [Yellow] | YouTube REPEAT A-B Yellow / YouTube / Repeat |
| [Blue] | Prime Video RANDOM Blue / Prime Video / Random |

| Original | Sustituto |
|----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

