 



 


 

 
 



 






 




 







 


Original	Sustituto
	 Power
	 Mute
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide
	 Info
	 Dual
	 Format
	 3D

Original	Sustituto
	 Vol +
	 Vol -
	 Ch +
	 Ch -
	 Exit
	 >>I
	 Ok
	 Menu
	 Right
	 Left
	 AV
	 Smart
	 Media
	 Text
	 D. Menu
	 TV/R
	 <<

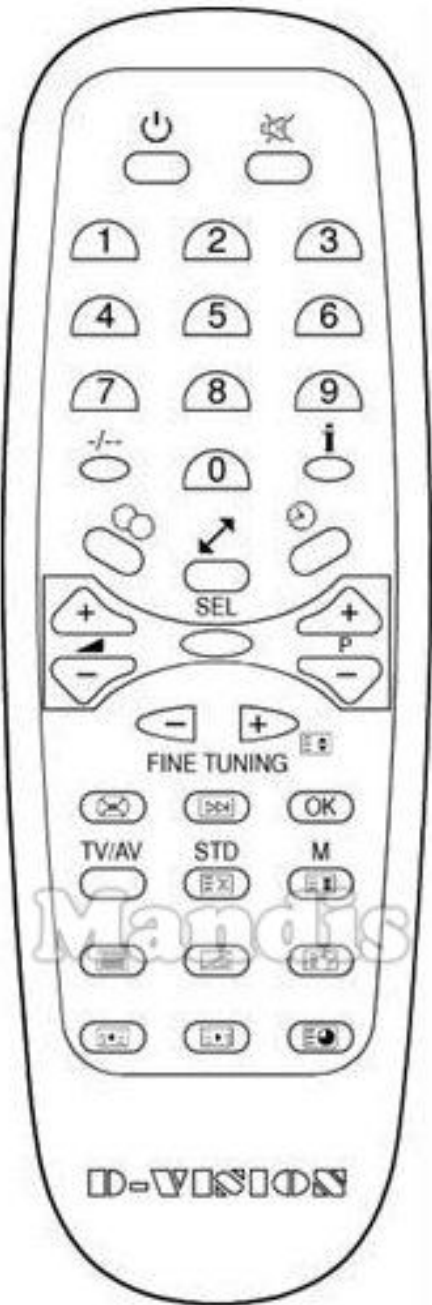



Original	Sustituto	Original	Sustituto
 [=>1]	 >>		
 [=O]	 SETTINGS  OPT Options		

Original	Sustituto	Original	Sustituto

