



Original		Sustituto		Original		Sustituto	
	Power		Power		Nicam		Audio / Lang I/II
	Mute		Mute / Dimmer		Menu		Menu / Home
	1		1		Up		Up
	2		2		Source		AV / Input / RDS
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Down		Down
	7		7		Exit		Exit / Cancel / Clear
	8		8		Display		Display / Media
	9		9		Vol+		Vol+
	0		0		CH+		CH+ / Page+
	-/--	+	Shift + Guide / EPG / -/--		Vol-		Vol-
	Recall		Back / Return		List		Smart / List
	P.Mode		Picture / Format		FAV/List		Fav / Marker / PC
	S.Mode		Sound / Title		CH-		CH- / Page-
	Sleep		Sleep / Timer		Tv/Radio		TV/Radio /





Original	Sustituto
EPG	Guide / EPG / -/--
Aspect	+ Shift + Picture / Format
Freeze	Pause / Step / Freeze
Index	Info / Angle
Cancel	+ Shift + Exit / Cancel / Clear
Subpage	Subtitle / EQ
Text	Text / Goto
Reveal	D.Menu / Top
Size	Zoom / Size
Hold	Stop / Hold
Mix	Setup / OPT /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random

Original	Sustituto

