
 






 

 











 

 













Original	Sustituto
 Power	 Power
 Open/Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 V-Mode	 Picture / Format
 4	 4
 5	 5
 6	 6
 P/N	 Text / Goto
 7	 7
 8	 8
 9	 9
 Program	 TV/Radio /
 0	 0
 10+	 Guide / EPG / -/-

Original	Sustituto
 Search	 Red / Netflix / Search
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 Title	 Sound / Title
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 PBC	 Smart / List
 USB/Card	 AV / Input / RDS
 Zoom	 Zoom / Size
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze





Original	Sustituto	Original	Sustituto
	I<<		I<< / Preset-
	>>		>> / Tune+
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Audio		Audio / Lang I/II
	Slow-B		CH- / Page-
	Slow-F		CH+ / Page+
	Return		Back / Return
	L/R		D.Menu / Top
	A-B		Yellow / YouTube / Repeat
	Step		Shift + Pause / Step / Step /
	Vol+		Vol+
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	Shuffle		Blue / Prime Video / Random
	Vol-		Vol-

Original	Sustituto	Original	Sustituto

