 


 
 



 




 

 


 
 
 
 
 

 






 











 

 

 
 
 




 
 


 
 

 

 

 
 





Original	Sustituto	Original	Sustituto
 Power	 Power	 Up	 Up
 16:9 Wide	 Format	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Vol +	 Vol +
 4	 4	 Vol -	 Vol -
 5	 5	 Menu	 Menu
 6	 6	 Source	 AV
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 Info	 Info
 0	 0	 Sleep	 Sleep
 F1	 Shift + 1	 Recall	 Back
 Guide	 Smart	 L / R	 Shift + Dual
 Smart S	 Dual	 Play / Index	 Play
 Smart P	 Options	 Pause / Zoom	 Pause





Original	Sustituto	Original	Sustituto
 Pause / Zoom	 Eject		
 Stop / Reveal	 Stop		
 TTX	 Text		
 I<< / Hold	 I<<		
 >>I / List	 >>I		
 << / Language	 <<		
 >> / Radio	 >>		
 >> / Radio	 TV/R		
 Red / Rec	 Red		
 Red / Rec	 Rec		
 >>I / List	 List		
 Green / Subtitle	 Green		
 Green / Subtitle	 Subt		
 Yellow / FAV	 Yellow		
 Yellow / FAV	 Pre Ch		
 Blue / EPG	 Blue		
 Blue / EPG	 Guide		

