
 




Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Size Aspect	 Zoom / Size
 Index	 Info / Angle
 Up.PG	 CH+ / Page+

Original	Sustituto
 Recall	 Smart / List
 Sub.PG	 Display / Media
 Down.PG	 CH- / Page-
 Up/CH+	 Up
 Vol-	 Vol-
 Left	 Left
 Enter	 OK
 Vol+	 Vol+
 Right	 Right
 Scan	 Setup / OPT /
 Down/CH-	 Down
 Tv/AV	 AV / Input / RDS
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/DVB-Menu	 Stop / Hold
 Exit/Eject	 Exit / Cancel / Clear
 Sleep/USB-C.R.	 Sleep / Timer



