

 


 


 
 
 

 
 

 

 


 



 
 
 
 
 

 






Original	Sustituto
 Power	 Power
 Input	 AV
 TV / DVD	 TV/R
 abc	 Text
 List	 List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute
 Menu	 Menu

Original	Sustituto
 Subt	 Subt
 -/--	 Guide
 DVD Menu	 D. Menu
 Img +	 Ch +
 Img -	 Ch -
 Up	 Up
 Right / >>	 Right
 Down	 Down
 Left / <<	 Left
 <<	 <<
 >>	 >>
 Play / Enter	 Ok
 Play	 Play
 Vol +	 Vol +
 Vol -	 Vol -
 Eject	 Eject
 Tools	 Options





	Original	Sustituto	Original	Sustituto
	>>I	 >>I		
	Pause	 Pause		
	Stop	 Stop		
	Zoom	 +  Shift + Eject		
	I<<	 I<<		

