




 






 
 
 


 



 
 
 

 

Original	Sustituto
 Power	 Power
 Display	 Shift + Info
 DTV Menu	 Shift + Menu
 TV	 TV/R
 PC	 Smart
 Line	 Media
 List	 List
 OPT	 Options
 EPG	 Guide
 i	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Sustituto
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 PRE	 Back
 Vol+	 Vol +
 Vol-	 Vol -
 Prog+	 Ch +
 Prog-	 Ch -
 Red/M/S	 Red
 Green/Still	 Green
 Yellow/Sleep	 Yellow
 Blue/P.Size	 Blue
 Tv Menu	 Menu
 [≡x]/Exit	 Exit
 Mute	 Mute
 [≡]/TTX	 Text





Original	Sustituto
 Up/P+	 Up
 Down/P-	 Down
 Right/Vol+	 Right
 Left/Vol-	 Left
 Enter	 Ok
 Open/Close	 Eject
 Setup	 Shift + D. Menu
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <</<I Slow	 <<
 Slow I>/>>	 >>
 I<</<II Step	 I<<
 Step II>/>>I	 >>I
 Rec	 Rec
 Input	 AV
 PIP On/Off	 Shift + 3D

Original	Sustituto
 PIP Sound	 Shift + Dual
 [=+]/Repeat	 Shift + Text
 [=i]/A-B	 Format
 [/≡]/Audio	 Dual
 [=o]/Subtitle	 Subt
 [=?]/Goto	 Pre Ch
 Title	 Sleep
 Angle	 Shift + Subt
 Menu	 D. Menu
 Zoom	 Shift + Eject
 Bookmark	 3D

