



 


 

 



 



















 

 









Original	Sustituto
 Power	 Power
 EPG	 Guide / EPG / -/--
 REP	 TV/Radio /
 Mute	 Mute / Dimmer
 Rec List	 Shift + Rec / Rec Mode
 CH List	 Smart / List
 Subtitle	 Subtitle / EQ
 Eject	 Eject / Surround
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+
 Source	 AV / Input / RDS

Original	Sustituto
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original		Sustituto	
	0		0
	Recall		Back / Return
	Fav		Fav / Marker / PC
	Vol +		Vol+
	Picture		Picture / Format
	Nicam / A2		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	Sound		Sound / Title
	Sleep		Sleep / Timer
	CH -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / Screen		Blue / Prime Video / Random
	Setup / TV/Txt		Setup / OPT /
	D-Menu /		D.Menu / Top

Original		Sustituto	
	Title / Reveal		Shift + Sound / Title
	PRO		Shift + Display / Media
	LAN / Hold		Shift + Smart / List
	Size / A-B		Zoom / Size
	Goto / Subpage		Text / Goto
	Index / Slow		Info / Angle



Cancel Menu