 



 

 

 






 





 

 

 

 







 

 







 

 





 


Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red/Sub.	 Red / Netflix / Search
 Green/TTX	 Green / APP / Repeat
 Yellow/Audio	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/--
 Info	 Info / Angle
 Tv/Radio	 TV/Radio /
 Rec	 Rec / Rec Mode
 DTV	 Smart / List
 Video	 Shift + 4
 Music	 Audio / Lang I/II
 Picture	 Picture / Format
 APP	 Shift + Green / APP /
 Setting	 Setup / OPT /
 Web	 Display / Media

Original	Sustituto
 Goto	 Text / Goto
 Home	 Shift + Menu /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Del	 Exit / Cancel / Clear
 >>I	 >>I / Preset+
 Vol+	 Vol+
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Vol-	 Vol-
 <<	 << / Tune-
 1	 1





Original	Sustituto	Original	Sustituto
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 0	 0		
 Stop	 Stop / Hold		

