



Original	Sustituto
 Power	 Power
 DVD	 Eject
 Mute	 Mute
 PMode	 Shift + Format
 SMode	 Shift + Dual
 Nicam	 Dual
 Aspect	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 -/--	 Shift + Guide
 Recall	 Back
 Red / DVD P.Scan	 Red
 Green / DVD Goto	 Green
 Yellow / DVD	 Yellow
 Blue / DVD Media	 Blue
 Blue / DVD Media	 Media
 PR+ / Up	 Ch +
 PR+ / Up	 Shift + Up
 PR- / Down	 Ch -
 PR- / Down	 Shift + Down
 Vol+ / Right	 Vol +
 Vol+ / Right	 Shift + Right
 Vol- / Left	 Vol -
 Vol- / Left	 Shift + Left
 Menu	 Menu
 Source	 AV





Original	Sustituto
Sleep	Sleep
Display Info	Info
Enter	Shift + Ok
TXT / DVD Repeat	Text
Hold / DVD A-B	TV/R
Lucidity / DVD Language	Options
Subpage / DVD Subtitle	Subt
Index / DVD Setup	Smart
Size / DVD	Shift + D. Menu
Reveal / DVD Title	List
Cancel / DVD	Shift + Eject
DTV Menu / DVD	D. Menu
DTV Menu / DVD	<<
DVD >>	>>
FAV / DVD Play/Pause	Pre Ch
FAV / DVD Play/Pause	Play
FAV / DVD Play/Pause	Pause

Original	Sustituto
Exit / DVD Stop	Exit
Exit / DVD Stop	Stop
Page Up / DVD	Shift + Ch +
Page Down / DVD	Shift + Ch -
Up	Up
Left	Left
OK / DVD Select	Ok
Right	Right
Down	Down
EPG / DVD □	Guide

