



Original	Sustituto
Power	Power
PR+	CH+ / Page+
Up	Up
Vol-	Vol-
Left	Left
E	OK
Right	Right
Vol+	Vol+
Down	Down
PR-	CH- / Page-
[ ]	Subtitle / EQ
Input	AV / Input / RDS
Menu	Menu / Home
1	1
2	2
3	3
4	4

Original	Sustituto
5	5
6	6
7	7
8	8
9	9
Sleep	Sleep / Timer
0	0
Mute	Mute / Dimmer
Normal	Smart / List
Recall	Back / Return
System	D.Menu / Top

