



 


 
 
 

 

 
 


 



 
 
 

 


 
 


 




 
 



 


 


 
 
 
 
 

 


 

 



 
 








 

 
 
 
 
 
 
 

 







 






Original	Sustituto	Original	Sustituto
 Power On	 Power	 Memory	 Blue
 Power Off	 +  Shift + Power	 Search	 TV/R
 1/BD	 1	 Input Mode	 AV
 2/(SAT/CBL)	 2	 CH+	 Ch +
 3/(DOCK)	 3	 CH-	 Ch -
 Status	 4	 Sleep	 Sleep
 BD	 5	 Audio Delay	 Smart
 Tuner	 6	 Mute	 Mute
 DVD	 7	 Vol+	 Vol +
 DOCK	 8	 Vol-	 Vol -
 TV	 9	 Menu	 Menu
 Game	 Guide	 Return	 Back
 SAT/CBL	 0	 CH Level	 Dual
 V.AUX	 Pre Ch	 Surround	 3D
 Band	 Red	 Up	 Up
 Mode	 Green	 Down	 Down
 Shift	 Yellow	 Left	 Left





Original	Sustituto	Original	Sustituto
	Right		Right
	Enter		Ok
	Night		Eject
	Restorer		D. Menu
	Tone		Info
	Test		Options
	Dimmer		List
	< Surround		Shift + Left
	> Surround		Shift + Right
	up Tuning		Shift + Up
	Down Tuning		Shift + Down
	Play Ipod		Play
	Pause Ipod		Pause
	Stop Ipod		Stop
	<< Ipod		<<
	>> Ipod		>>
	Repeat Ipod		Text
			Random Ipod
			I<< Ipod
			>>I Ipod
			Format
			I<<
			>>I

