



 


Original	Sustituto
 AVR/AVC On	 Power
 AVR/AVC Off	 Shift + Power
 Power Tv	 TV/R
 Power VCR	 Smart
 Power DVD/VDP	 Media
 Yellow Nothing 1	 1
 CD	 2
 DVD/VDP	 3
 VCR	 4
 Yellow Nothing 2	 5
 TV/DBS	 6
 MD/Tape Mon	 7
 Tuner	 8
 Shift	 9
 Video Select	 0
 Input Mode	 Guide
 Surround Mode	 Pre Ch

Original	Sustituto
 << Deck-VCR	 Shift + <<
 < Deck-VCR	 Shift + Play
 Deck-VCR >	 Shift + Pause
 Deck-VCR >>	 Shift + >>
 Stop Deck-VCR	 Shift + Stop
 CH+	 Ch +
 CH-	 Ch -
 Disc Skip+	 Blue
 Play CD/MD/CDR-DVD/	 Play
 Stop CD/MD/CDR-DVD/	 Stop
 Pause CD/MD/CDR-DVD/	 Pause
 CD/MD/CDR-DVD/ VDP >>I	 >>I
 I<< CD/MD/CDR-DVD/	 I<<
 CD/MD/CDR-DVD/ VDP >>	 >>
 << CD/MD/CDR-DVD/	 <<
 System/Setup	 Menu
 Surround/Menu	 D. Menu





Original	Sustituto	Original	Sustituto
 T.Tone/Return	 Back		
 Status/Display	 Info		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 CH.Select/Select	 Ok		
 Master Volume	 Vol +		
 Master Volum	 Vol -		
 Muting	 Mute		
 Tv Vol+	 Shift + Vol +		
 Tv Vol-	 Shift + Vol -		
 Tv CH+	 Shift + Ch +		
 Tv CH-	 Shift + Ch -		





Original	Sustituto
AVR/AVC On	Power
AVR/AVC Off	+ Shift + Power
Play CD/MD/CDR-DVD/	Play
Pause CD/MD/CDR-DVD/	Pause
Stop CD/MD/CDR-DVD/	Stop
CD/MD/CDR-DVD/ VDP >>I	>>I
I<< CD/MD/CDR-DVD/	I<<
CD/MD/CDR-DVD/ VDP >>	>>
<< CD/MD/CDR-DVD/	<<

Original	Sustituto





Original	Sustituto
AVR/AVC On	Power
AVR/AVC Off	+ Shift + Power
CH+	Ch +
CH-	Ch -
Deck-VCR >>	>>
<< Deck-VCR	<<
Deck-VCR >	+ Shift + Pause
Stop Deck-VCR	+ Shift + Stop
Title CD/MD/CDR-DVD/	Exit
Disc Skip+ CD/MD/CDR-DVD/	Blue
Play CD/MD/CDR-DVD/	Play
Pause CD/MD/CDR-DVD/	Pause
Stop CD/MD/CDR-DVD/	Stop
CD/MD/CDR-DVD/ VDP >>I	>>I
I<< CD/MD/CDR-DVD/	I<<
System/Setup	Menu
Surround/Menu	D. Menu

Original	Sustituto
T.Tone/Return	Back
Status/Display	Info
Up	Up
Down	Down
Right	Right
Left	Left
CH.Select/Select	Ok

