



Original	Sustituto
Power	Power
Input TV Audio	1
Input Tuner	2
Input Bluetooth	3
Input Phono	4
Input USB	5
Input HEOS	6
Input Internet Radio	7
Input CBL/SAT	8
Input DVD	9
Input Blu-ray	Guide
Input Aux1	0
Input Game	Pre Ch
Input Aux2	+ Shift + Smart
Input Media	Media
Input CD	Smart
Quick Select 1	D. Menu

Original	Sustituto
Quick Select 2	Text
Quick Select 3	Eject
Quick Select 4	AV
CH + / Page +	Ch +
CH - / Page -	Ch -
Eco	3D
Mute	Mute
Volume +	Vol +
Volume -	Vol -
Info	Info
Option	Options
Setup	Menu
Back	Back
Back	Exit
Up	Up
Down	Down
Right	Right




 



 













 
 










Original	Sustituto
	Left
	Ok
	I<< / Tune -
	Play
	>>I / Tune +
	<<
	Pause
	Stop
	>>
	Green / Sound Mode Movie
	Red / Sound Mode Music
	Blue / Sound Mode Game
	Yellow / Sound Mode Pure
	Shift + 1
	Shift + 2
	Shift + 3
	Shift + 4

Original	Sustituto
	Shift + 5
	Shift + 6
	Shift + 7
	Shift + 8
	Shift + 9
	Shift + 0
	Shift + Pre Ch
	Sleep





Original		Sustituto		Original		Sustituto	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Mute		Mute
	Input HEOS		6		Volume +		Vol +
	Input Internet Radio		7		Volume -		Vol -
	Input CBL/SAT		8		Up		Up
	Input DVD		9		Down		Down
	Input Blu-ray		Guide		Right		Right
	Input Aux1		0		Left		Left
	Input Game		Pre Ch		Enter		Ok
	Input Aux2		Shift + Smart		Back		Back
	Input Media		Media		Back		Exit
	Input CD		Smart		I<< / Tune -		I<<
	Quick Select 1		D. Menu		Play		Play





Original		Sustituto		Original		Sustituto	
	>>I / Tune +		>>I				
	<<		<<				
	Pause		Pause				
	Stop		Stop				
	>>		>>				
	1	+	Shift + 1				
	2	+	Shift + 2				
	3	+	Shift + 3				
	4	+	Shift + 4				
	5	+	Shift + 5				
	6	+	Shift + 6				
	7	+	Shift + 7				
	8	+	Shift + 8				
	9	+	Shift + 9				
	0	+	Shift + 0				
	Enter	+	Shift + Pre Ch				
	Sleep		Sleep				





 



 
 
 



 

 









 

 









Original	Sustituto
Quick Select 1	D. Menu
Enter	+ Shift + Pre Ch
Quick Select 4	AV
Quick Select 3	Eject
Quick Select 2	Text
Power	Power
Input TV Audio	1
Input Tuner	2
Input Bluetooth	3
Input Phono	4
Input USB	5
Input HEOS	6
Input Internet Radio	7
Input CBL/SAT	8
Input DVD	9
Input Blu-ray	Guide
Input Aux1	0

Original	Sustituto
Input Game	Pre Ch
Input Aux2	+ Shift + Smart
Input Media	Media
Input CD	Smart
CH + / Page +	Ch +
CH - / Page -	Ch -
Mute	Mute
Volume +	Vol +
Volume -	Vol -
Up	Up
Down	Down
Right	Right
Back	Exit
Left	Left
Enter	Ok
Back	Back
I<< / Tune -	I<<





Original	Sustituto	Original	Sustituto
 Play	 Play		
 >>I / Tune +	 >>I		
 <<	 <<		
 Pause	 Pause		
 1	 Shift + 1		
 2	 Shift + 2		
 3	 Shift + 3		
 4	 Shift + 4		
 5	 Shift + 5		
 6	 Shift + 6		
 7	 Shift + 7		
 8	 Shift + 8		
 9	 Shift + 9		
 0	 Shift + 0		
 Stop	 Stop		
 >>	 >>		
 Sleep	 Sleep		

