 


 






 






 

 


 







 
 


 

 
 
 
 



 





 






 
 


 
 





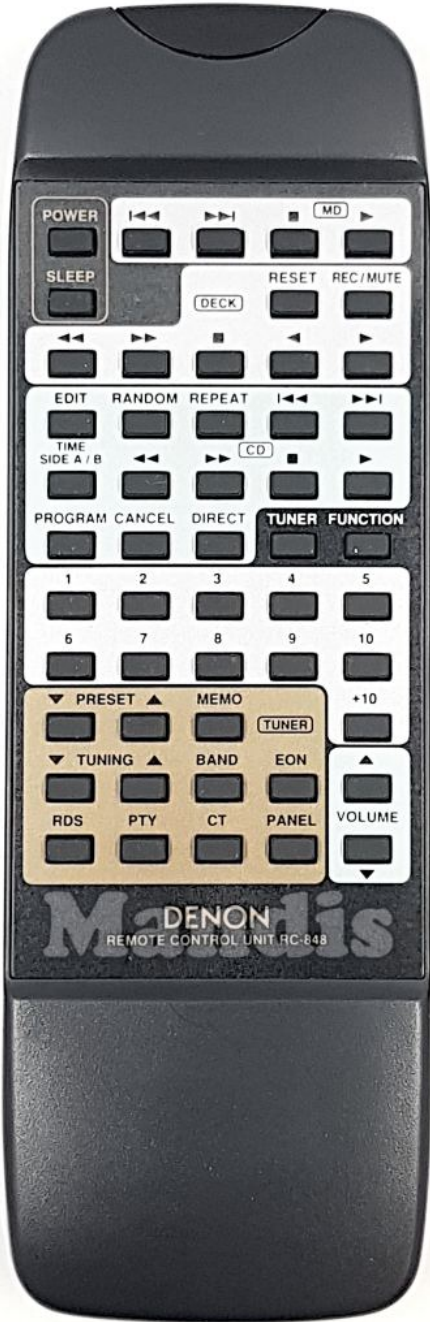 


| Original   | Sustituto   | Original  | Sustituto   |
|--|---|---|---|
|  Power    |  Power   |  Preset Up   |  Up      |
|  Sleep    |  Sleep   |  Preset Down |  Down    |
|  Vol+     |  Vol +   |  Tuning Up   |  Ch +    |
|  Vol-     |  Vol -   |  Tuning Down |  Ch -    |
|  Tuner    |  Smart   |  Memo        |  Options |
|  Function |  Media   |  Band        |  TV/R    |
|  1        |  1       |  Eon         |  Red     |
|  2        |  2       |  Panel       |  Green   |
|  3        |  3       |  CT          |  Yellow  |
|  4        |  4       |  PTY         |  Blue    |
|  5      |  5     |  RDS       |  Subt  |
|  6      |  6     |  Play CD   |  Play  |
|  7      |  7     |  Stop CD   |  Stop  |
|  8      |  8     |  >>  CD    |  >>    |
|  9      |  9     |   << CD    |   <<   |
|  10     |  0     |  >> CD     |  >>    |
|  +10    |  Guide |  << CD     |  <<    |





| Original  |               | Sustituto   |               | Original  |           | Sustituto   |               |
|---|---------------|---|---------------|---|-----------|---|---------------|
|    | Repeat        |    | Text          |    | Stop Deck |    | Ok            |
|    | Random        |    | 3D            |    | 1 CD      |    | Shift + 1     |
|    | Edit          |    | Dual          |    | 2 CD      |    | Shift + 2     |
|    | Time Side A/B |    | AV            |    | 3 CD      |    | Shift + 3     |
|    | Cancel        |    | Exit          |    | 4 CD      |    | Shift + 4     |
|    | Direct        |    | Format        |    | 5 CD      |    | Shift + 5     |
|    | Program       |    | Shift + Sleep |    | 6 CD      |    | Shift + 6     |
|    | Play MD       |    | Shift + Play  |    | 7 CD      |    | Shift + 7     |
|    | Stop MD       |    | Shift + Stop  |    | 8 CD      |    | Shift + 8     |
|    | >>I MD        |    | Shift + >>I   |    | 9 CD      |    | Shift + 9     |
|  | I<< MD        |  | Shift + I<<   |  | 10 CD     |  | Shift + 0     |
|  | Reset         |  | Back          |  | +10 CD    |  | Shift + Guide |
|  | Rec Mute      |  | Rec           |   |           |   |               |
|  | >> Deck       |  | Shift + Ch +  |   |           |   |               |
|  | << Deck       |  | Shift + Ch -  |   |           |   |               |
|  | < Deck        |  | Left          |   |           |   |               |
|  | > Deck        |  | Right         |   |           |   |               |

