



Original	Sustituto
 Power	 Power
 CBL/SAT	 AV / Input / RDS
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Shift + Blue / Prime
 AUX	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Green / APP /
 8K	 Shift + Yellow / YouTube /
 Phono	 Guide / EPG / -/--
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + 0
 Quick Select 1	 TV/Radio /
	 Sound / Title

Original	Sustituto
 Quick Select 2	 Picture / Format
 Quick Select 3	 D.Menu / Top
 Quick Select 4	 Zoom / Size
 CH/Page Up	 CH+ / Page+
 CH/Page Down	 CH- / Page-
 Eco	 Smart / List
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Info	 Info / Angle
 Option	 Shift + Setup / Tools
 Back	 Back / Return
 Setup	 Setup / OPT /
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right





 









Original	Sustituto
I<</Tune-	I<< / Preset-
Play	Play / Slow
>>I/Tune+	>>I / Preset+
<<	<< / Tune-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>	>> / Tune+
Green/Movie	Green / APP / Repeat
Red/Music	Red / Netflix / Search
Blue/Game	Blue / Prime Video / Random
Yellow/Pure	Yellow / YouTube / Repeat
1	1
2	2
3	3
4	4
5	5
6	6

Original	Sustituto
7	7
8	8
9	9
0	0
Enter	OK
Sleep	Sleep / Timer













 



 





 











Original	Sustituto
 Power	 Power
 CBL/SAT	 AV / Input / RDS
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Shift + Blue / Prime
 AUX	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Blue / Prime Video / Random
 8K	 Yellow / YouTube / Repeat
 Phono	 Guide / EPG / -/--
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + 0
 Internet Radio	 TV/Radio /
 Quick Select 1	 Sound / Title

Original	Sustituto
 Quick Select 2	 Picture / Format
 Quick Select 3	 D.Menu / Top
 Quick Select 4	 Zoom / Size
 CH/Page Up	 CH+ / Page+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Back	 Back / Return
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow
 >>I/Tune+	 >>I / Preset+
 <<	 << / Tune-









 

 


 





 


 


 
 




 





 


Original	Sustituto
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>	 >> / Tune+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 OK
 Sleep	 Sleep / Timer

Original	Sustituto





Original	Sustituto
 Power	 Power
 CBL/SAT	 AV / Input / RDS
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Blue / Prime Video / Random
 AUX	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Green / APP / Repeat
 8K	 Yellow / YouTube / Repeat
 Phono	 Guide / EPG / -/--
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + 0
 Internet Radio	 TV/Radio /
 Quick Select 1	 Sound / Title

Original	Sustituto
 Quick Select 2	 Picture / Format
 Quick Select 3	 D.Menu / Top
 Quick Select 4	 Zoom / Size
 CH/Page Up	 CH+ / Page+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Back	 Back / Return
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow
 >>I/Tune+	 >>I / Preset+
 <<	 << / Tune-





	Original	Sustituto	Original	Sustituto
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	>>	>> / Tune+		
	1	1		
	2	2		
	3	3		
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	0	0		
	Enter	OK		
	Sleep	Sleep / Timer		

