



| Original | Sustituto |
|---|---|
|  Power |  Shift + Power |
|  AMP Power |  Power |
|  CD |  Shift + 3 |
|  Recorder |  Shift + 2 |
|  Network |  Shift + 1 |
|  Optical 1 |  Shift + 4 |
|  Optical 2 |  Shift + 5 |
|  Optical 3 |  Shift + 6 |
|  Phono |  Shift + 8 |
|  AUX |  Shift + 7 |
|  Coaxial |  Shift + 9 |
|  I<< |  I<< / Preset- |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  >>I |  >>I / Preset+ |
|  << |  << / Tune- |
|  Stop |  Stop / Hold |

| Original | Sustituto |
|---|---|
|  >> |  >> / Tune+ |
|  Info |  Info / Angle |
|  Pure Direct/Favorites |  Fav / Marker / PC |
|  Volume+ |  Vol+ |
|  Source |  AV / Input / RDS |
|  Mute |  Mute / Dimmer |
|  Volume- |  Vol- |
|  Queue |  Smart / List |
|  Mode/Option |  Picture / Format |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Back |  Back / Return |
|  Down |  Down |
|  Setup |  Setup / OPT / |
|  1 |  1 |





| Original | Sustituto |
|---|---|
|  Power |  Shift + Power |
|  AMP Power |  Power |
|  CD |  Shift + 3 |
|  Recorder |  Shift + 2 |
|  Network |  Shift + 1 |
|  Optical 1 |  Shift + 4 |
|  Optical 2 |  Shift + 5 |
|  Optical 3 |  Shift + 6 |
|  Phono |  Shift + 8 |
|  AUX |  Shift + 7 |
|  Coaxial |  Shift + 9 |
|  I<< |  I<< / Preset- |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  >>I |  >>I / Preset+ |
|  << |  << / Tune- |
|  Stop |  Stop / Hold |

| Original | Sustituto |
|---|---|
|  >> |  >> / Tune+ |
|  Info |  Info / Angle |
|  Pure Direct/Favorites |  Fav / Marker / PC |
|  Volume+ |  Vol+ |
|  Source |  AV / Input / RDS |
|  Mute |  Mute / Dimmer |
|  Volume- |  Vol- |
|  Queue |  TV/Radio / |
|  Mode/Option |  Picture / Format |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Back |  Back / Return |
|  Down |  Down |
|  Setup |  Setup / OPT / |
|  1 |  1 |



