









Original	Sustituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
Audio	Audio / Lang I/II
FAV+	Shift + CH+ /
FAV	Fav / Marker / PC

Original	Sustituto
FAV-	Shift + CH- /
CH+	CH+ / Page+
P.Mode	Picture / Format
Vol+	Vol+
CH-	CH- / Page-
S.Mode	Sound / Title
Vol-	Vol-
Source	AV / Input / RDS
Sleep	Sleep / Timer
Aspect	Shift + Picture / Format
Info	Info / Angle
Up	Up
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down





Original	Sustituto
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 Index	 Display / Media
 Play/Mix	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/Reveal	 Stop / Hold
 <</Hold	 << / Tune-
 <</Hold	 +  Shift + Stop /
 >>/Subpage	 >> / Tune+
 Size	 Zoom / Size
 I<<	 I<< / Preset-
 >>I/Cancel	 >>I / Preset+
 T-Shift	 Smart / List
 Tv/Radio	 TV/Radio /
 Rec	 Rec / Rec Mode
 EPG	 Guide / EPG / -/--
 Red	 Red / Netflix / Search

Original	Sustituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

