



Original	Sustituto	Original	Sustituto
	Power		Power
	TV/AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Return		Back
	Eject		Eject
	Play		Play
	Pause		Pause

Original	Sustituto	Original	Sustituto
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Sys Menu		D. Menu
	Display		Shift + Info
	Picture		Format
	Sound		Shift + Dual
	Timer		Shift + AV
	Nicam/A2		Options
	Lan/Prog-		Ch -
	Zoom/Prog+		Ch +





Original	Sustituto	Original	Sustituto
 SUB	 Subt		
 Goto	 TV/R		
 Set/Tv/TXT/DVB	 Text		
 Menu/Cancel Tv Format	 Menu		
 Lang/Reveal Exit	 Dual		
 Title/Info	 Info		
 <</Hold	 <<		
 >>/Size Text	 >>		
 I<</Subpage/F	 I<<		
 >>I/Index/EPG	 >>I		
 Red/Prog/Tv/Radi	 Red		
 Green/Slow/Audio	 Green		
 Yellow/Rep/Freeze	 Yellow		
 Blue/A-B/Subtitle	 Blue		

