

 

 

 

 

 



 

 














 
 
 



 



 



 




Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Still	 Shift + Pause / Step /
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II

Original	Sustituto
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 UP	 Up
 Left	 Left
 OK / Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 Media	 Display / Media
 CH+	 CH+ / Page+
 Auto / PVR List	 Smart / List
 Vol+	 Vol+
 CH-	 CH- / Page-
 Sleep	 Sleep / Timer
 Vol-	 Vol-
 Red	 Red / Netflix / Search





Original	Sustituto
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	<< / Tune-
	Shift + Stop /
	>> / Tune+
	l<< / Preset-
	>>l / Preset+
	Play / Slow
	Pause / Step / Freeze
	Zoom / Size
	Stop / Hold
	Fav / Marker / PC
	Setup / OPT /
	Guide / EPG / -/--
	TV/Radio /

Original	Sustituto
	Rec / Rec Mode
	Subtitle / EQ



Program