



Original	Sustituto
	Display
	Power
	Normal
	Tv/Av/DVD
	Sleep
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Aspect
	0
	Sound Mode
	Display / Media
	Power
	Shift + Display / Media
	TV/Radio /
	Sleep / Timer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Smart / List
	0
	Sound / Title

Original	Sustituto
	Vol-
	Tv Menu
	Vol+
	Up
	CH+ / Page+
	Left
	Right
	Mute
	Down
	CH- / Page-
	OK
	D.Menu / Top
	AV / Input / RDS
	I<< / Preset-
	>>I / Preset+
	Subtitle / EQ
	<< / Tune-
	Vol-
	Menu / Home
	Vol+
	Up
	CH+ / Page+
	Left
	Right
	Mute / Dimmer
	CH- / Page-
	Down
	OK
	D.Menu / Top
	AV / Input / RDS
	I<< / Preset-
	>>I / Preset+
	Subtitle / EQ
	<< / Tune-



[illegible]