





 

 

 

 


 

 




 
 

 


 



 
 

 













 

 



 



 







 





 



 


 

 

 



 

 




 
 




Original	Sustituto	Original	Sustituto
 Power	 Power	 8	 8
 Mute	 Mute	 9	 9
 Tv/DVB-T	 Smart	 0	 0
 []/Line	 Media	 -/--	 Shift + Guide
 [+]/Display	 Info	 PRE	 Pre Ch
 [≡]/TXT	 Text	 Vol+	 Vol +
 PIP On/Off	 Shift + 3D	 Vol-	 Vol -
 PIP Swap	 Shift + Subt	 Prog+	 Ch +
 PIP Source	 Shift + AV	 Prog-	 Ch -
 PIP Sound	 Shift + TV/R	 MS	 Back
 1	 1	 [▼]/Still	 AV
 2	 2	 Timer/Sleep	 Shift + Power
 3	 3	 [II]/Tv Menu	 Menu
 4	 4	 -I/I-/P.STD	 Shift + Format
 5	 5	 -I/I-/S.STD	 Shift + Dual
 6	 6	 Up/P+	 Up
 7	 7	 Down/P-	 Down





Original	Sustituto
 Right/Vol+	 Right
 Left/Vol-	 Left
 Enter	 Ok
 [<>]/P.Size	 Format
 -IXI-/Exit	 Exit
 Open/Close	 Eject
 Rec	 Rec
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <</< Slow	 <<
 Slow >/>>	 >>
 I<</<I Step	 I<<
 Step I>/>>I	 >>I
 Red/Setup	 Red
 Green/Input	 Green
 Yellow/Title	 Yellow

Original	Sustituto
 Blue/Menu	 Blue
 Timer/repeat	 Shift + Text
 [≡i]/A-B	 Shift + Info
 [/≡]/Audio	 Dual
 [≡♦]/Subtitle	 Subt
 [≡?]/Goto	 Options
 [≡+]/Program/Me	 TV/R
 [<≡]/List/Angle	 Shift + Ch -
 [≡>]/Bookmark/O	 Shift + Ch +
 [≡o]/Zoom/EPG	 Guide
 [≡X]/Cancel/i	 3D

