



 








 


 
 

 
 



 



 



 



 


 



 

 


 
 
 



 

 
 
 













Original	Sustituto	Original	Sustituto
 Power	 Power	 Blue / Title	 Blue
 HDMI Control	 D. Menu	 1	 1
 Record	 Rec	 2	 2
 Play	 Play	 3	 3
 Pause	 Pause	 4	 4
 Stop	 Stop	 5	 5
 I<<	 I<<	 6	 6
 <<	 <<	 7	 7
 >>	 >>	 8	 8
 >>I	 >>I	 9	 9
 Screen	 Format	 0	 0
 Lang	 Dual	 Text	 Text
 Subtitle	 Subt	 Swap	 Pre Ch
 Internet	 Media	 Up	 Up
 Red/Zoom/↑	 Red	 Down	 Down
 Green/Repeat/↓	 Green	 Right	 Right
 Yellow / Root	 Yellow	 Left	 Left





Original		Sustituto		Original		Sustituto	
	Ok		Ok				
	P/Ch+		Ch +				
	P/Ch-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	Menu		Menu				
	Source		AV				
	Return		Back				
	Epg		Guide				
	Info		Info				
	Sleep		Sleep				
	3D		3D				
	Search Mode		TV/R				
	Music/Movie/Phot		Smart				
	Display		Shift + Info				
	Presets		Options				

