



Original	Sustituto	Original	Sustituto
Guide	Guide / EPG / --		Play
Power	Power		Pause
Eject	Eject / Surround		<< / Tune-
Tv/Radio	TV/Radio /		>> / Tune+
Red/Goto	Red / Netflix / Search		D.Setup
Green/Angle	Green / APP / Repeat		Rec
Yellow/Repeat	Yellow / YouTube / Repeat		Stop / Hold
Blue/A-B	Blue / Prime Video / Random		I<< / Preset-
FAV	Fav / Marker / PC		>>I/Index
Text	Text / Goto		Menu / Home
Freeze/Hold	Shift + Pause / Step /		Lang/Audio
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle		Sleep
Media	Shift + Display / Media		Down

Original	Sustituto	Original	Sustituto
	Play / Slow		TV
	Pause / Step / Freeze		DVD
	<< / Tune-		SAT
	>> / Tune+		AUX
	Setup / OPT /		SLOW STEP-FREEZE HOLD REC MODE
	Rec / Rec Mode		TUNE- TUNE+ PRESET- PRESET+
	Stop / Hold		TITLE LANG I/II EQ SURROUND
	I<< / Preset-		SOUND AUDIO SUBTITLE
	>>I / Preset+		FORMAT SIZE TIMER PROGRAM
	Menu / Home		PICTURE ZOOM SLEEP TV RADIO
	Lang/Audio		TOP MENU OPT-TOOLS GOTO RDS
	Up		D.MENU SETUP TEXT AV INPUT
	Left		HOME ANGLE
	OK		MENU
	Right		OK
	Sleep		CLEAR EXIT
	Down		CANCEL
			LIST
			SMART
			MEDIA
			DISPLAY
			CH PAGE
			TV
			DVD
			CD-STB
			1
			2
			3
			VIDEO
			4
			TAPE
			5
			TUNER
			6
			AUX-HDD
			USB
			7
			8
			9
			BLUETOOTH
			0
			HDMI-BAT
			GUIDE EPG
			FAV MARKER
			NETFLIX
			APP
			YouTube
			Prime Video
			SEARCH
			REPEAT
			REPEAT A-B
			RANDOM
			Mandis SHOP
			www.mandis.tv



