


















 

 











 













 



 

 

 

 







| Original | Sustituto |
|---|---|
|  |  Power |
|  |  Mute / Dimmer |
|  |  Play / Slow |
|  |  Pause / Step / Freeze |
|  |  Stop / Hold |
|  |  Rec / Rec Mode |
|  |  << / Tune- |
|  |  >> / Tune+ |
|  |  Audio / Lang I/II |
|  |  Subtitle / EQ |
|  |  Picture / Format |
|  |  Text / Goto |
|  |  Shift + Green / APP / APP / |
|  |  AV / Input / RDS |
|  |  Menu / Home |
|  |  Up |
|  |  Info / Angle |

| Original | Sustituto |
|---|---|
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Exit / Cancel / Clear |
|  |  Down |
|  |  Back / Return |
|  |  Vol+ |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  CH- / Page- |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |



