













 










































Original	Sustituto
Audio+	 Shift + Vol+
Reveal	 Setup / OPT /
Update	 Smart / List
Bright- Sys	 Shift + CH- /
Bright+ Mode	 Shift + CH+ /
AV 2	 Shift + AV / Input / RDS
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9
Guide -/-- 1.	 Guide / EPG / -/--
0/10	 0
2.Fav P/C 2.	 Fav / Marker / PC
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat

Original	Sustituto
Yellow	 Yellow / YouTube / Repeat
Blue	 Blue / Prime Video / Random
Audio-	 Shift + Vol-
3	 3
Tone-	 << / Tune-
Tone+	 >> / Tune+
Color+ P.Std	 Picture / Format
Contrast+	 >>  / Preset+
Color- S.Std	 Sound / Title
Contrast-	  << / Preset-
Surround	 Eject / Surround
Nicam/Mono	 Shift + Audio / Lang I/II
Level L	 Shift + Left
Level R/Woofer	 Shift + Right
Display	 Display / Media
Mute	 Mute / Dimmer
Txt Stop	 Stop / Hold



Original	Sustituto	Original	Sustituto
Info	 Info / Angle	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Menu audio	 Audio / Lang I/II
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
Txt Expand	 Zoom / Size	2	 2
TV/AV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
On/Off	 Power		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		

