

 

 

 



 



 

 

 

 

 



 



 

 

 



















 

 



 



 







Original	Sustituto	Original	Sustituto
 Power	 Power	 Dev.List	 Display / Media
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Text	 Text / Goto
 3	 3	 Auto	 Setup / OPT /
 Lang	 Audio / Lang I/II	 Menu	 Menu / Home
 4	 4	 Zoom	 Zoom / Size
 5	 5	 Info	 Info / Angle
 6	 6	 Exit	 Exit / Cancel / Clear
 Time Shift	 D.Menu / Top	 Up	 Up
 7	 7	 CH+ / Page+	 CH+ / Page+
 8	 8	 Left	 Left
 9	 9	 Vol-	 Vol-
 Tv/Radio	 TV/Radio /	 OK	 OK
 FAV	 Fav / Marker / PC	 Right	 Right
 0	 0	 Vol+	 Vol+
 Recall	 Back / Return	 CH-	 CH- / Page-





	Original	Sustituto	Original	Sustituto
	Down			
	Filelist			
	Rec			
	Stop			
	Play			
	Pause			
	<<			
	>>			
	I<<			
	>>I			
	Red/FAV/Daily			
	Green/DEL/Weekl			
	Yellow/Movie/P.Inf			
	Blue/Look/Timer			

