



 







 


 

 











Original	Sustituto	Original	Sustituto
 Power	 Power	 5	 5
 Red/↑	 Red / Netflix / Search	 6	 6
 Green/↓	 Green / APP / Repeat	 7	 7
 Yellow	 Yellow / YouTube / Repeat	 8	 8
 Blue	 Blue / Prime Video / Random	 9	 9
 [=]	 Text / Goto	 FAV	 Fav / Marker / PC
 [=x]	 Exit / Cancel / Clear	 0	 0
 EPG	 Guide / EPG / -/--	 Tv/DTV	 TV/Radio /
 [*]/[■]	 Zoom / Size	 Vol-	 Vol-
 Screen	 Picture / Format	 Vol+	 Vol+
 Lang	 Audio / Lang I/II	 Mute	 Mute / Dimmer
 Subtitle	 Subtitle / EQ	 PR-	 CH- / Page-
 Sleep	 Sleep / Timer	 PR+	 CH+ / Page+
 1	 1	 Preset	 Smart / List
 2	 2	 Source	 AV / Input / RDS
 3	 3	 Info/[≡?]	 Info / Angle
 4	 4	 Swap/Recall	 Display / Media



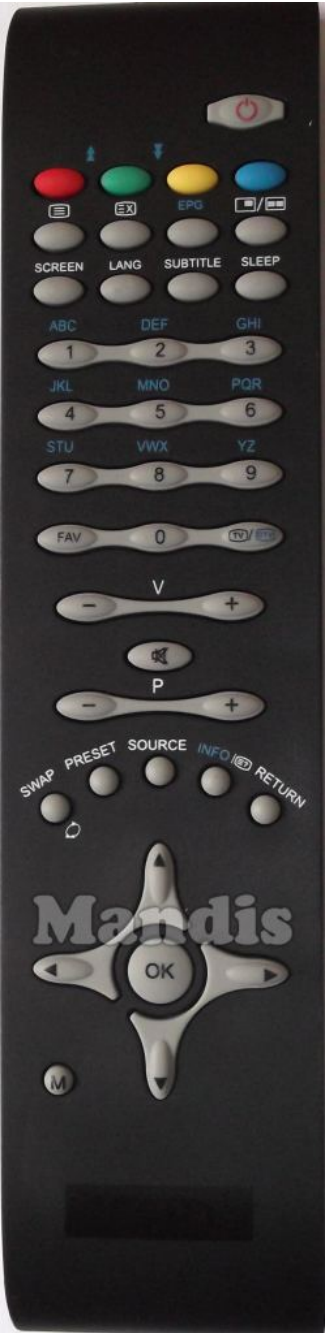

	Original	Sustituto	Original	Sustituto
	Return	 Back / Return		
	Up	 Up		
	Left	 Left		
	OK	 OK		
	Right	 Right		
	Down	 Down		
	M	 Menu / Home		

