



Original	Sustituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Quality/P-	CH- / Page-
0	0
Recall/P+	CH+ / Page+
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up	Up

Original	Sustituto
Left	Left
OK	OK
Right	Right
Sel	Smart / List
Down	Down
FAV	Fav / Marker / PC
Audio	Audio / Lang I/II
Pause	Pause / Step / Freeze
Red/Subtitle	Red / Netflix / Search
AV	AV / Input / RDS
TV/R	TV/Radio /
Blue/Info	Blue / Prime Video / Random
Green/PIP	Green / APP / Repeat
Yellow/EPG	Yellow / YouTube / Repeat

