



Original	Sustituto
 Power	 Power
 Mute	 Mute
 Red/Repeat	 Red
 Green/Prog	 Green
 Yellow/Slow	 Yellow
 Blue/Angle	 Blue
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<<	 <<<
 >>>	 >>>
 Goto/Fav	 Pre Ch
 Eject	 Eject
 I<<<	 I<<<
 >>>I	 >>>I
 Setup	 Options
 Vcr	 Format

Original	Sustituto
 TV/Radio	 TV/R
 Recall	 Back
 Menu	 Menu
 Text	 Text
 Exit	 Exit
 Guide	 Guide
 Source	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Ok/Ch List	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Info	 Info
 Zoom	 Shift + Eject
 Ch+	 Ch +





	Original	Sustituto		Original	Sustituto
	CH -	CH -			
	1	1			
	2	2			
	3	3			
	4	4			
	5	5			
	6	6			
	7	7			
	8	8			
	9	9			
	0	0			
	AUDIO	SOUND DUAL			
	SUBTITLE	AD SUBT			

