





Original	Sustituto
POWER	Power
MUTE	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV/RADIO	TV/Radio /
0	0
<-PR	Back / Return
MENU	Menu / Home
INFO	Info / Angle
PAGE+ / Zoom	Shift + CH+ / Page+

Original	Sustituto
PAGE+ / Zoom	Zoom / Size
EXIT	Exit / Cancel / Clear
EPG	Guide / EPG / -/-
PAGE-	Shift + CH- /
Up / PR+	CH+ / Page+
Up / PR+	Up
Left / VOL-	Vol-
Left / VOL-	Left
OK / List	OK
Right / VOL+	Vol+
Right / VOL+	Right
FAV	Fav / Marker / PC
Down / PR-	CH- / Page-
Down / PR-	Down
Pause	Pause / Step / Freeze
Func / SAT	Display / Media
SAT	Smart / List





	Original	Sustituto	
	TV/AV	 AV / Input / RDS	
	UHF	 +  Shift + Power	
	Func	 Setup / OPT /	
	Red / Audio	 Red / Netflix / Search	
	Red / Audio	 Audio / Lang I/II	
	Green / Position	 Green / APP / Repeat	
	Yellow / Subtitle	 Yellow / YouTube / Repeat	
	Yellow / Subtitle	 Subtitle / EQ	
	BLUE / SOUND L/R	 Blue / Prime Video / Random	
	BLUE / SOUND L/R	 Sound / Title	

	Original	Sustituto

