 









 



































 











 
 
 














Original		Sustituto		Original		Sustituto	
	Standby		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Zoom/Aspect		Shift + Zoom /
	2		2		Zoom/Aspect		Picture / Format
	3		3		CH-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		Up		Up
	6		6		Exit		Exit / Cancel / Clear
	7		7		Left		Left
	8		8		OK/Enter		OK
	9		9		Right		Right
	Recall		Back / Return		Sleep		Sleep / Timer
	0		0		Down		Down
	List		Smart / List		Source		AV / Input / RDS
	Vol+		Vol+		Red		Red / Netflix / Search
	Info/Display		Display / Media		Green		Green / APP / Repeat
	Info/Display		Info / Angle		Yellow		Yellow / YouTube / Repeat





Original	Sustituto
	Blue / Prime Video / Random
	Text / Goto
	D.Menu / Top
	Shift + Stop /
	Audio / Lang I/II
	Rec / Rec Mode
	Shift + Green / APP /
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	Zoom / Size
	Subtitle / EQ
	<< / Tune-
	>> / Tune+
	TV/Radio /
	I<< / Preset-
	Guide / EPG / -/--

Original	Sustituto
	>>I / Preset+
	Fav / Marker / PC

