




 
 


 

















 

 

 






Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ASPECT	 Format
 P.C.	 Pre Ch
 MENU	 Menu
 SOURCE	 Shift + AV
 Up	 Up

Original	Sustituto
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Display	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 CH +	 Ch +
 CH -	 Ch -
 Sound	 Dual
 PIC	 Shift + Format
 NICAM	 Media
 SLEEP	 Sleep
 TV	 Smart
 AV	 AV
 HDMI	 Shift + Media





Original		Sustituto		Original	Sustituto
SCART1	SCART1	AD SUBT	Subt		
Y.Pb.Pr	Y.PB.PR	SHIFT + AD SUBT	Shift + Subt		
RECALL	RECALL	RETURN BACK	Back		
	Red	A	Red		
	Green	B	Green		
	Yellow	C	Yellow		
	Blue	D	Blue		
REVEAL	Reveal	PLAY MODE	Play		
HOLD	Hold	II	Pause		
LIST	List	DISC NAV LIST	List		
INDEX	Index	■	Stop		
SUBPAGE	Subpage	REC MODE	Rec		
SIZE	Size	ECO 3D	3D		
AUTO	Auto	-/-- GUIDE	Guide		
TEXT	Text	REPEAT TEXT	Text		

