



 



 

 



 

 

 

 



 

 

 

 







Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Lang	 Audio / Lang I/II
 [=]..	 Subtitle / EQ
 Mute	 Mute / Dimmer
 Home	 Shift + Menu /
 Smart	 Smart / List
 Vol+	 Vol+

Original	Sustituto
 Vol-	 Vol-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 [G]	 Guide / EPG / -/--
 i	 Info / Angle
 ←	 Back / Return
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Text	 Text / Goto
 <<	 << / Tune-
 Stop	 Stop / Hold



